



How To Restart STB



OWNDAYS

OVERVIEW

01 INTRODUCTION

02 Guide

03 Photo

INTRODUCTION 01



Cyber Signage System

Instead of a proprietary STB, the fully cloud-based system is designed to run on a variety of existing hardware, such as Windows PCs, Android tablets, or specific "CYBER Stick" players, using a standard web browser for content creation and delivery. This approach aims to reduce initial investment and management costs by eliminating the need for dedicated, expensive STB hardware.

STB In Digital Signage

In general digital signage terminology, an STB (Set-Top Box) or player is a small computing device that connects a display screen to a network (or runs offline content from local storage like a USB drive) and processes the data into the visual content shown on the screen. .

STB Product

Guide

02

Our Guide



Method 1: Power Restart (Most Reliable)

- **Recommended if the screen is frozen or not updating**
- Locate the **power adapter** connected to the Cyberbox
- **Unplug the power cable**
- Wait **10–15 seconds**
- Plug the power cable back in
- The Cyberbox will **boot automatically** (usually takes 1–3 minutes)

Method 2: Restart via Remote Control (If Available)

- Some Cyberbox units come with a remote.
- Press **Power** → Select **Restart** or **Reboot**
- Confirm if prompted
- Wait for the device to restart

Our Guide

If Restart Does Not Work

- Try these checks:
- Confirm **power LED** is on
- Check **HDMI connection** to the screen
- Ensure **internet connection** is active
- Try a **different power adapter** (if available)
- Try to check HDIM Splitter if is spoiled or no light



OWNDAYS

STB Photo

03

Photo Guide

